


1. DISPLAY / CONTROL PANEL

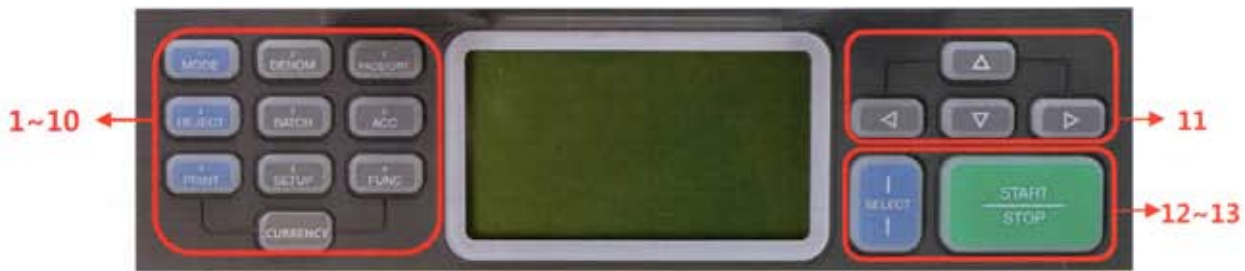

1	MODE	Select D.D(Denomination) or CNT(Count) Mode
2	DEMON	Select D.D Option(MIX,AUTO.MANU)
3	FACE/ORT	Facing or Orientation of the Notes
4	REJECT	Display the Reject reasons
5	BATCH	Select BATCH Quantity
6	ACC	Count Notes' value and pieces in Accumulation
7	PRINT	Print the counting information
8	SETUP	SETUP Mode is for Sensors' level and H/W condition set-up
9	FUNC	FUNCTION Mode includes the basic set-up for operation
0	CURRENCY	Changed Currencies menu
11	Navigation	Change the Display Menu & Select Menu
12	CLEAR	Clear Information
13	OK	Select Information & Manual Start/Stop

2. Back cover opening / Note Jam Clearing

You can open the back cover by pulling the open switch in order to clear the note jamming and note's stacking problem.



[Pulling the Open Switch]



[Open the Back cover]




[Taking out the Jamming Notes]

3. SD card connectivity (In case of Program update)



Take the screw out with Screw Driver (+) and open the cover

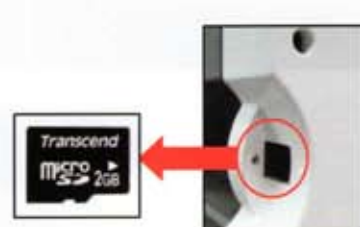


4. Feed Gap Adjustment

In case the gap of Main Feed Roller and Reverse Roller is narrow or the note input is not smoothly working, adjust the feed gap by turning Regulator Cap with a coin. To widen the gap, turn Regulator cap counter-clockwise (to left)
To shorten the gap, turn it clockwise (to right)



5. Daily cleaning

For optimum performance, cleaning should be performed once a week under normal usage and more frequently under heavy usage. Use clean cloth or soft brush or air-blower.

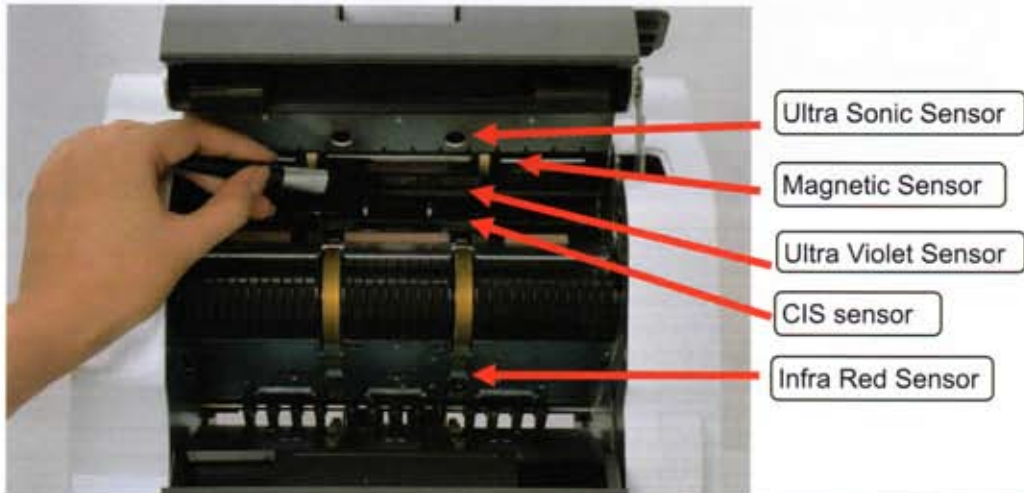

6. Detail Sensor Cleaning




1) Remove Side Cover LT & RT



2) Remove Top cover



3) Remove Detect upper Assembly

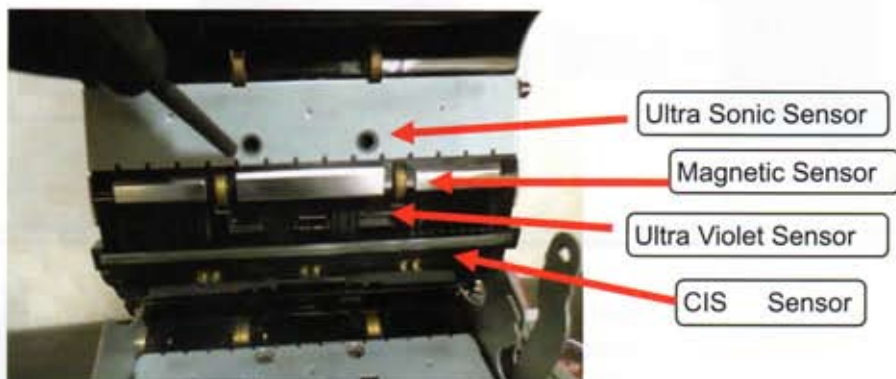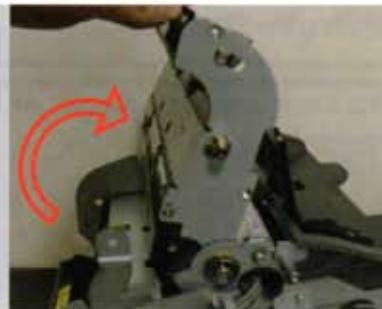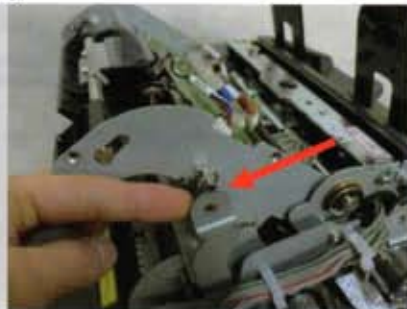

4) Remove dust and alien residue not only using air-blower at the Detect upper Assembly but also brushing out the fine dust by using fine brush as above picture.